

Predictive Maintenance Report

Status: Anomalie

Anomalie-Schwelle (p99): 0.004

Exceed-Rate: 23.5%

RMS Mittelwert: 1.20 g

RMS Maximum: 1.23 g

Abweichung: +71% (vs. Referenz p99)

Plots

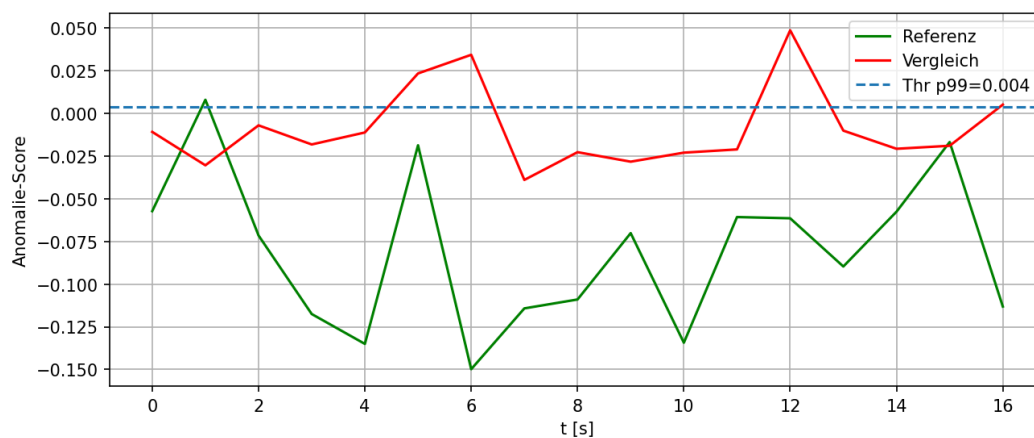


Abbildung 1

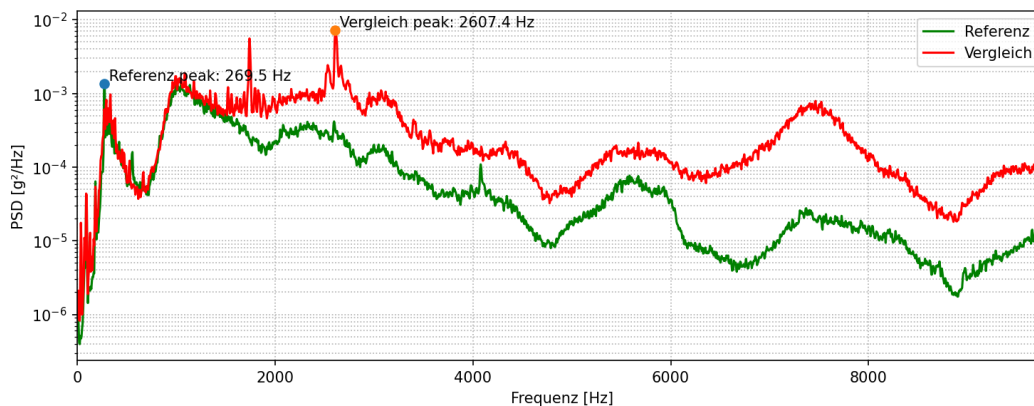


Abbildung 2

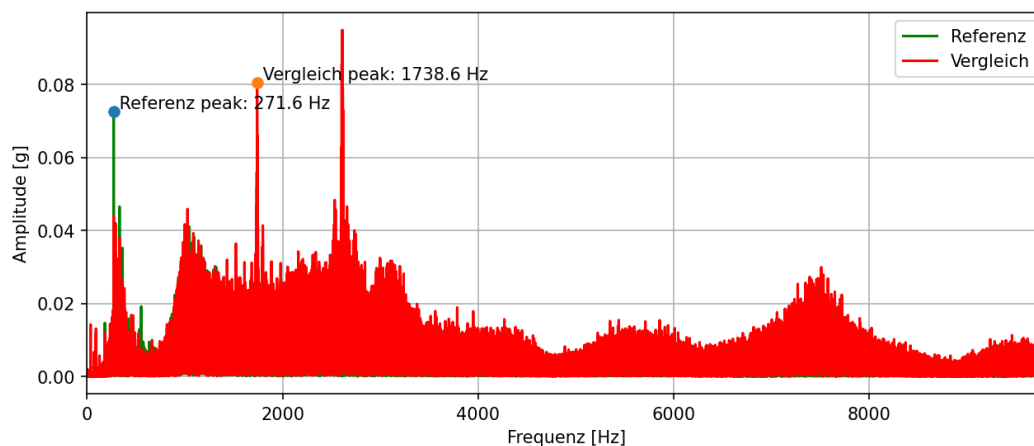


Abbildung 3

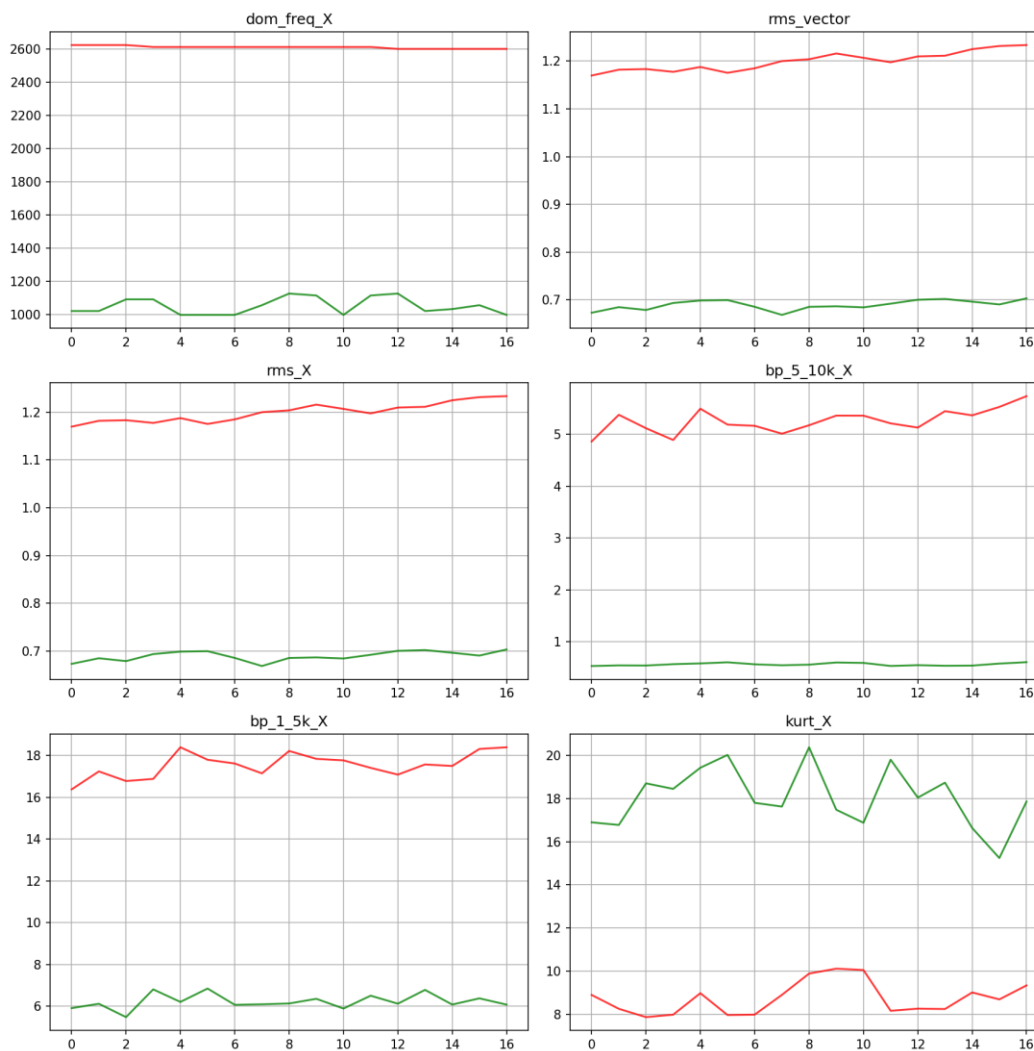


Abbildung 4


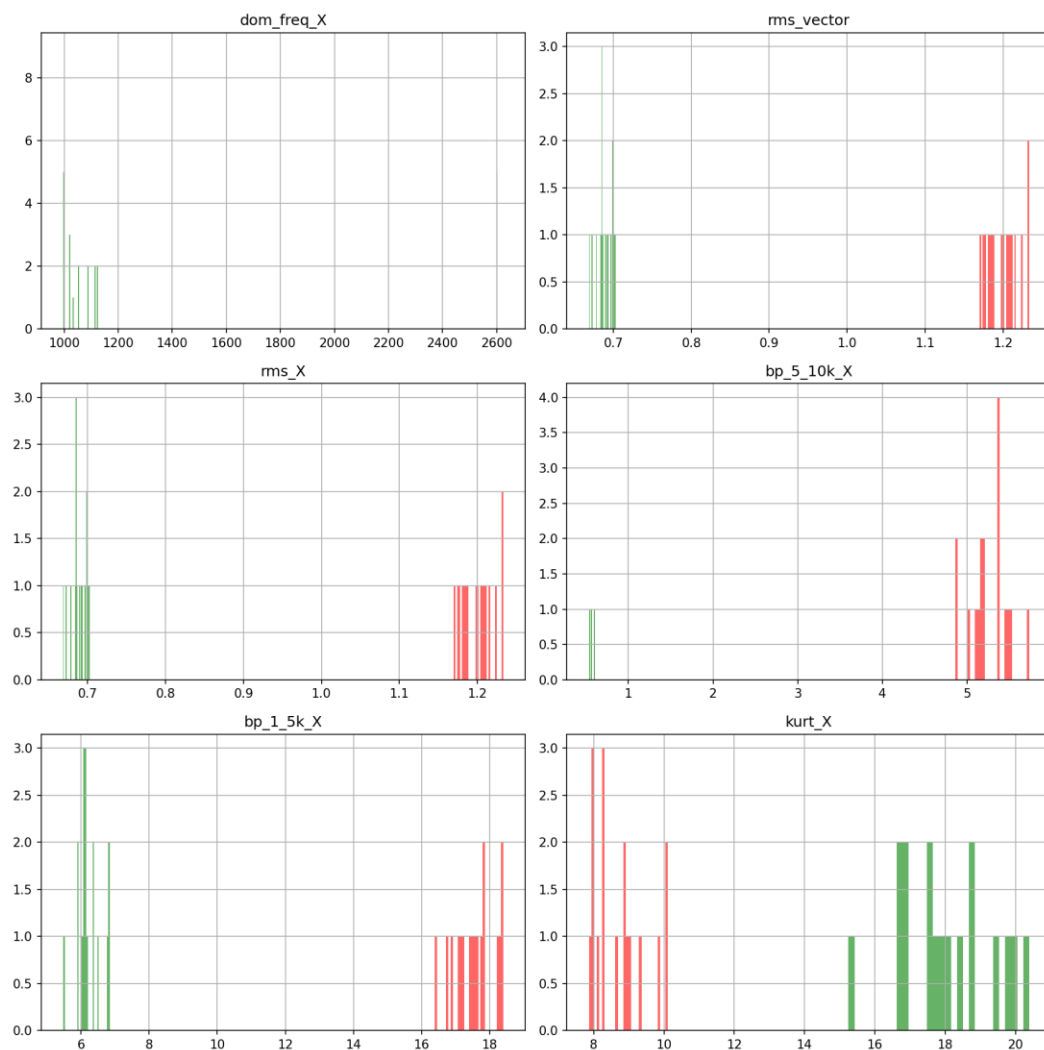


Abbildung 5

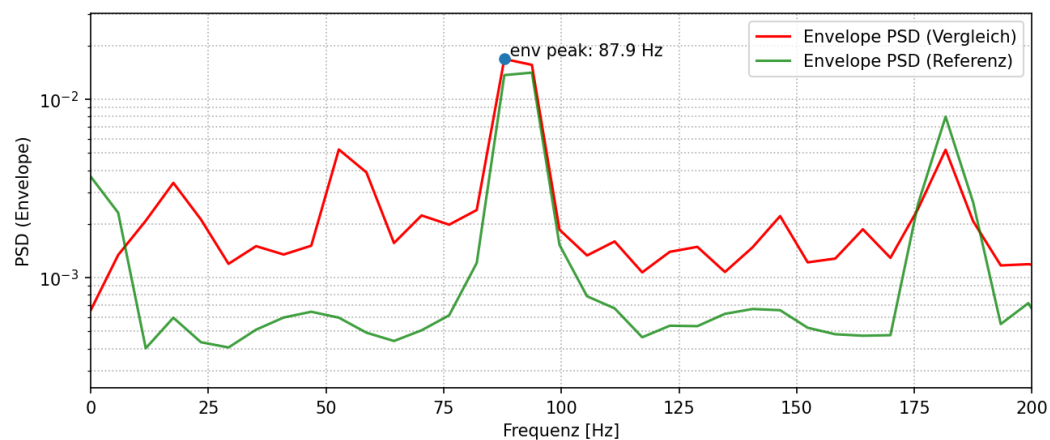

Feature-Vergleich

Feature	Referenz (Ø)	Vergleich (Ø)
rms_X	0.690	1.200
peak_abs_X	9.632	15.865
p2p_X	18.337	29.683
crest_X	13.967	13.227
kurt_X	18.050	8.739
skew_X	-0.195	-0.025
bp_0_1k_X	1.383	1.627
bp_1_5k_X	6.226	17.550